

US 100


Installation Guide

Hand-free Stand

cino

Overview

Thank you for purchasing Cino US100 Hand-free Stand. The US100 is specifically designed for hands-free applications, delivering great flexibility to maximize users' comfort and productivity. This document provides an easy reference for assembling and installing the US100.

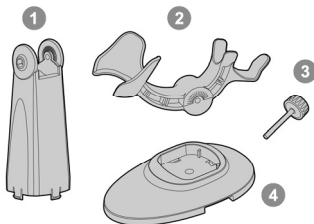


Package Content :

- 1 Bracket
- 2 Scanner Holder
- 3 Angle Adjustment Knob
- 4 Base

Assemble the Stand


Step 1

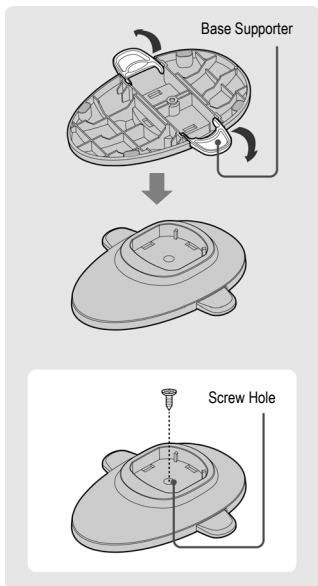


- 1 Turn the base upside-down and open the base supporters.
- 2 Turn the base to the front side and place the base on your desired location.

If you would like to fix the stand by screw, please follow below procedures.

- 1 Insert a M4 (approx. 8~10mm long) flat head self-tapping screw into the screw hole of the base.
- 2 Tighten the screw to secure the base to the flat surface.


 Please note that the M4 screw is not provided in this package.

Step 2

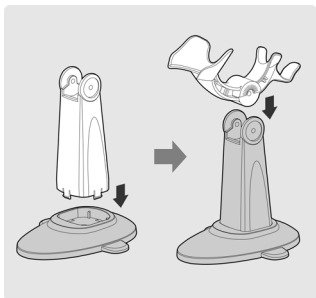


- 1 Fit the bracket into the base to lock the bracket to the base.
- 2 Place the scanner holder on the bracket groove properly.

Step 3

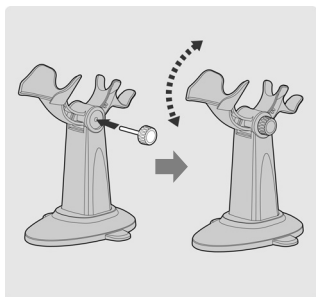

- 1 Insert the angle adjustment knob. Turn the knob clockwise to secure the scanner holder to the bracket.
- 2 The stand is now ready to be used with the scanner. You can loose the knob to adjust the angle.

Dismount the Stand

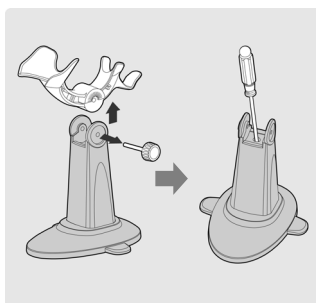

- 1 Release the knob to remove the scanner holder.
- 2 Prepare a long screwdriver and insert it into the hole on the top of the bracket.
- 3 Loose the screw from the base and remove the base from the mounted surface.

 **www.cino.com.tw**

US100 Installation Guide
International Edition, Rev. A1



P/N: YMAUF00010010R0

CINO GROUP

PC WORTH INT'L CO., LTD.

© Copyright PC Worth Int'l Co., Ltd.

© Copyright Cino Group

cino