

 **DATALOGIC**

**DL-AXIST**  
Personal Digital Assistant (PDA)



**Quick Reference Guide**

## **Datalogic ADC S.r.l.**

Via S. Vitalino, 13  
40012 Lippo di Calderara di Reno  
Bologna - Italy  
Telephone: (+39) 051-3147011  
Fax: (+39) 051-3147205

## **©2016 Datalogic ADC S.r.l.**

An Unpublished Work - All rights reserved. No part of the contents of this documentation or the procedures described therein may be reproduced or transmitted in any form or by any means without prior written permission of Datalogic ADC S.r.l. or its subsidiaries or affiliates ("Datalogic" or "Datalogic ADC"). Owners of Datalogic products are hereby granted a non-exclusive, revocable license to reproduce and transmit this documentation for the purchaser's own internal business purposes. Purchaser shall not remove or alter any proprietary notices, including copyright notices, contained in this documentation and shall ensure that all notices appear on any reproductions of the documentation.

Should future revisions of this manual be published, you can acquire printed versions by contacting your Datalogic representative. Electronic versions may either be downloadable from the Datalogic website ([www.datalogic.com](http://www.datalogic.com)) or provided on appropriate media. If you visit our website and would like to make comments or suggestions about this or other Datalogic publications, please let us know via the "Contact Datalogic" page.

### **Disclaimer**

Datalogic has taken reasonable measures to provide information in this manual that is complete and accurate, however, Datalogic reserves the right to change any specification at any time without prior notice.

Datalogic and the Datalogic logo are registered trademarks of Datalogic S.p.A. in many countries, including the U.S.A. and the E.U. DL-Axist™ and SoftSpot are trademarks of Datalogic S.p.A. or of Datalogic Group companies. The Bluetooth word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by Datalogic Group companies is under license. Android™ is a trademark of Google Inc. All other brand and product names are trademarks of their respective owners.

### **Patents**

Patent. See [www.patents.datalogic.com](http://www.patents.datalogic.com) for patent list.



# Table of Contents

<b>Introduction</b> .....	<b>1</b>
Conventions .....	1
<b>Out of the Box</b> .....	<b>3</b>
<b>General View</b> .....	<b>5</b>
Front View .....	5
Back View .....	6
Side View .....	7
Top View .....	7
Bottom View .....	7
<b>Battery</b> .....	<b>9</b>
Install the Battery .....	9
Charge the Battery .....	11
Charge with USB .....	11
Charge with the dock .....	12
Replace the Battery .....	16
<b>SD Card/ SIM Card</b> .....	<b>17</b>
Install the microSD Card .....	17
Install the SIM Card .....	19
<b>Getting Started</b> .....	<b>21</b>
Power Button .....	21
Power On .....	21
Suspend Mode .....	21
Long Press Power Menu .....	22
Home Screen .....	27
Customize the Home Screen .....	28
Virtual Keyboard .....	29
Applications .....	30
Resetting the Terminal .....	32
Configuration Reset .....	32
Device Reset .....	33
LED Indicators .....	34
<b>Connections</b> .....	<b>35</b>
USB Connection .....	35
USB Direct Connection .....	35
USB Dock Connection .....	35
Ethernet Connection .....	37

---

Ethernet Dock Connection .....	37
WLAN Connection .....	38
MIMO (Multiple-Input and Multiple-Output) .....	39
WWAN Connection .....	40
WPAN Connection .....	41
Near Field Communication (NFC) .....	42
Read NFC Tags .....	42
<b>Data Capture .....</b>	<b>43</b>
Imager Data Capture .....	43
<b>Reference Documentation .....</b>	<b>45</b>
<b>Services and Support .....</b>	<b>47</b>
Warranty Terms and Conditions .....	47



# Introduction

## Conventions

This guide uses the following conventions:

'PDA', 'terminal', 'device' and 'DL-Axist' refer to the DL-Axist PDA.

'Dock' and 'Single Dock' refer to the DL-Axist Single Slot Dock.

The label artworks may be only a draft. Refer to the product labels for more precise information.

# NOTES



## Out of the Box

The DL-Axist package contains:

- DL-Axist (device)
- Rechargeable battery
- USB charge/communication cable
- Battery Box (for spare battery)
- Quick Start Guide
- Safety & Regulatory Addendum
- EULA sheet

Remove all the components from their packaging; check their integrity and compare them with all the packing documents.



**CAUTION**

**Keep the original packaging for use when sending products to the technical assistance center. Damage caused by improper packaging is not covered under the warranty.**

# NOTES






## General View


### Front View




# Back View

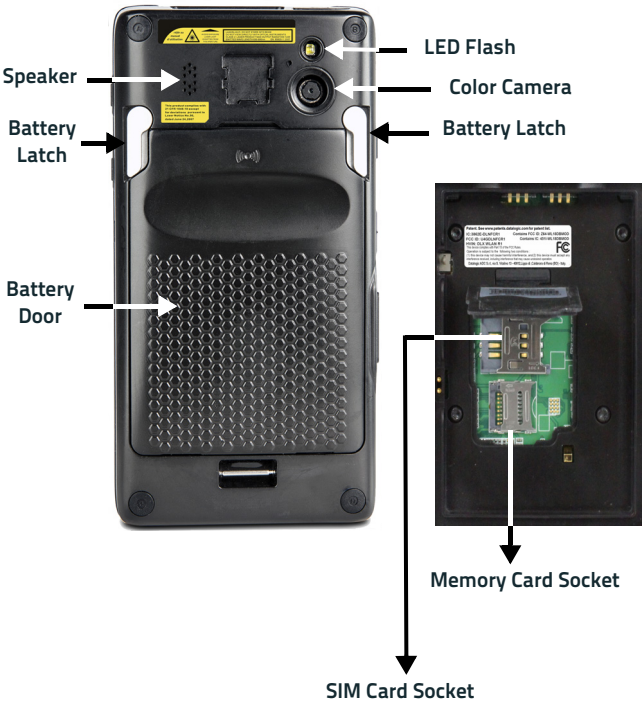


## Side View

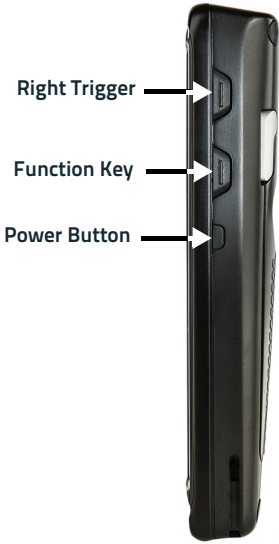

## Top View

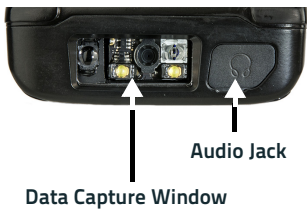

## Bottom View

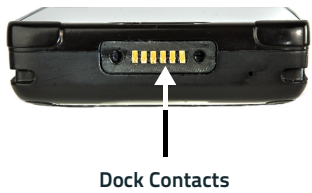

# NOTES



# Battery

## Install the Battery

To install the battery pack, follow the steps below:

1. Rotate the latches to the open position:



2. Grab the battery cover by the sides and lift it out of the way:



3. Remove the battery pack from the battery box\*. Insert the battery pack into the slot, top (contacts) side first, and press it into place:



\* Always use the battery box to carry the battery pack. Do not put the battery pack in your pocket.

4. Insert the battery cover, bottom first, and press it into place:



5. Rotate the latches to the lock position to lock the cover:



6. Press and release the power button to turn the DL-Axist on.

## Charge the Battery

DL-Axist battery pack is not initially fully charged. After installing the battery, charge it with the USB cable or with the single dock.




**Charge the battery for a minimum of 4 hours for the standard battery and 8 hours for the extended battery.**

During the charging process the charging LED positioned at the top left side of the display glows red constantly. Once the charging process has been completed, the charging LED glows green constantly.

### Charge with USB


You can use the provided USB charge/communication cable in conjunction with the power supply adapter (p/n 94ACC0135) to charge the terminal from a power outlet. To prevent the risk of short-circuiting, first connect the USB cable to the DL-Axist micro USB port, and then connect the USB cable to the power adapter.

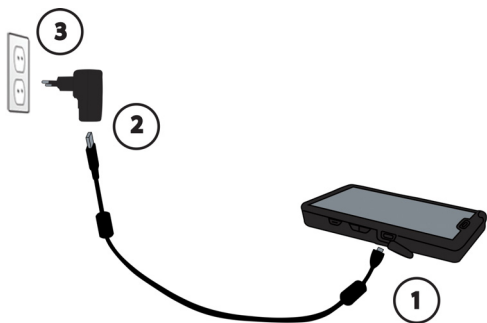

**Use only a Datalogic approved power supply.**

## Charge with the dock

The dock provides power to the DL-Axist and allows the charging of the battery.

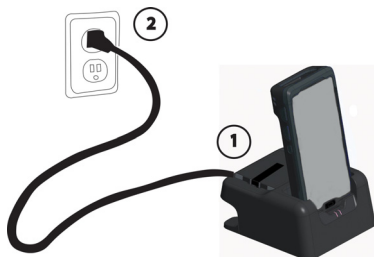

You can also charge an additional battery pack by inserting it into the rear slot of the dock.



**CAUTION**

By default, the battery pack is disconnected at the factory to avoid damage due to excessive draining.

Annual replacement of rechargeable battery pack avoids possible risks or abnormalities and ensures maximum performance.



**CAUTION**

Avoid storing batteries for long periods in a state of full charge or very low charge.

We recommend charging the battery pack every two to three months to keep its charge at a moderate level to maximize battery life.



**WARNING**

Risk of explosion if battery is replaced by an incorrect type.

Dispose of used batteries according to the instructions.

Il y a risque d'explosion si la batterie est remplacée par une batterie de type incorrect.

Mettre au rebut les batteries usagées conformément aux instructions.



**NOTE**

Even if the storage temperature range is wider, in order to achieve the longest battery life, store the terminal and the spare batteries between 20 to 30°C (68 to 86°F).

Charging is allowed in the battery temperature range from 0°C to 45°C.

**NOTE**

To maximize battery life, turn off radios when they are not needed.

**NOTE**

To maximize operating autonomy, the DL-Axist checks its battery level at all times. If the battery is not sufficiently charged, the DL-Axist will not turn on when the ON/OFF Power button is pressed.

In this case, either substitute with a charged battery, insert the DL-Axist into a powered dock, or plug it into a wall charger.

**WARNING**

Installing, charging and/or any other action should be done by authorized personnel and following this manual.

The battery pack may get hot, explode, ignite, and/or cause serious injury if exposed to abusive conditions. If the battery pack is replaced with an improper type, there is risk of explosion and/or fire.

Use the battery box to carry the battery pack, do not put the battery pack in your pocket.

Do not place the battery pack in or near a fire or other heat source; do not place the battery pack in direct sunlight, or use or store the battery pack inside unventilated areas in hot weather; do not place the battery pack in microwave ovens, in clothes dryers, in high pressure containers, on induction cook surfaces or similar devices. Doing so may cause the battery pack to generate heat, explode or ignite. Using the battery pack in this manner may also result in a loss of performance and a shortened life expectancy.



Use only a Datalogic approved power supply. The use of an alternative power supply will void the product warranty, may cause product damage and may cause heat, an explosion, or fire.

The area in which the units are charged should be clear of debris and combustible materials or chemicals.

Do not use the battery pack of this terminal to power devices other than this terminal.

Immediately discontinue use of the battery pack if, while using, charging or storing the battery pack, the battery pack emits an unusual smell, feels hot, changes color or shape, or appears abnormal in any other way.

Do not short-circuit the battery pack contacts connecting the positive terminal and negative terminal. This might happen, for example, when you carry a spare battery pack in your pocket or purse; accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the contacts of the battery pack (these look like metal strips on the battery pack). Short-circuiting the terminals may damage the battery pack or the connecting object.

Do not apply voltages to the battery pack contacts.

Do not pierce the battery pack with nails, strike it with a hammer, step on it or otherwise subject it to strong impacts, pressures, or shocks.

Do not disassemble or modify (i.e. bend, crush or deform) the battery pack. The battery pack contains safety and protection devices, which, if damaged, may cause the battery pack to generate heat, explode or ignite.

In case of leakage of liquid from the battery, avoid contact with liquid the skin or eyes. If the contact occurs, immediately wash the affected area with water and consult a doctor.

Do not solder directly onto the battery pack.

Do not expose the battery pack to liquids.

Avoid any knocks or excessive vibrations. If the device or the battery is dropped, especially on a hard surface, you should take it to the nearest Authorised Repair Centre for inspection before continuing to use it.

**WARNING**

Before replacing the battery pack, turn off the device or put it in swap battery mode (see "[Swap Battery](#)" on page 22).

Do not remove or damage the battery pack's label.

Do not use the battery pack if it is damaged in any part.

Battery pack usage by children should be supervised.

Collect and recycle waste batteries separately from the device in compliance with European Directive 2006/66/EC, 2011/65, 2002/96/EC and subsequent modifications, with US and China regulatory laws and regulations about the environment.

## Replace the Battery

To replace the battery pack, follow the steps below:

1. Turn off the DL-Axist, or put it in **Swap Battery** mode (see "[Swap Battery](#)" on page 22).
2. Rotate the latches to the open position:



3. Grab the battery cover by the sides and lift it out of the way:



4. Remove the battery by pulling the tab on the bottom of the battery:



5. Insert the new battery pack into the slot (see '[Install the Battery](#)' on page -9, steps 3 to 6).



## SD Card/ SIM Card

### Install the MicroSD Card

DL-Axist supports microSD memory cards. To access the microSD card slot and insert the card follow the steps below:

1. Turn off the DL-Axist or put it in **Swap Battery** mode (see [‘Swap Battery’](#) on page -22
2. Remove the battery pack (see [‘Replace the Battery’](#) on page -16, steps 1 to 4).
3. Lift the retaining door:




4. Slide the memory card holder to the left to unlock it. Lift the holder:



5. Insert the memory card into the holder. Make sure the contacts side is face down:



6. Close the holder and shift it to the right to lock it:

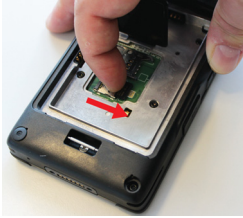

7. Close the retaining door.
8. Insert the battery pack into the slot (see 'Install the Battery" on page -9, steps 3 to 6).

### **Remove the MicroSD Card**

To remove the microSD card, follow the steps above to access the microSD slot, and remove it from its slot.

## Install the SIM Card

A SIM card stores the subscriber's personal information, GSM/GPRS radio settings, security keys, contacts, etc. SIM cards can be installed in compatible mobile devices, enabling you to switch devices without losing personal and setup information.

To access the SIM card slot and insert the card follow the steps below:

1. Turn off the DL-Axist or put it in **Swap Battery** mode (see '[Swap Battery](#)' on page -22
2. Remove the battery pack (see '[Replace the Battery](#)' on page -16, steps 1 to 4).
3. Lift the retaining door:




4. Slide the SIM card holder to the left to unlock it. Lift the holder:



5. Insert the SIM card into the holder. Make sure the contacts side is face down:



6. Close the holder and shift it to the right to lock it:

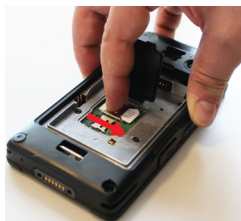

7. Close the retaining door.
8. Insert the battery pack into the slot (see 'Install the Battery" on page -9, steps 3 to 6).

### **Remove the SIM Card**

To remove the SIM card, follow the steps above to access the SIM card slot, and remove it from its slot.





# Getting Started

## Power Button


### Power On

The DL-Axist turns on when a charged battery pack is inserted.

### Suspend Mode

Suspend mode automatically turns the screen off and locks the terminal to save battery power when the terminal is inactive for a programmed period of time.

Press and release the power button to toggle the terminal in or out of suspend mode:

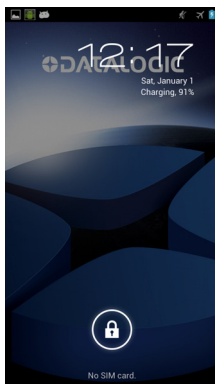


To unlock the home screen, tap and drag the **Lock** icon to the right side of the screen.

To set the timeout limit, refer to the DL-Axist User's Manual.

## Long Press Power Menu

Press and hold the **Power** button until the **Long Press Menu** menu displays:

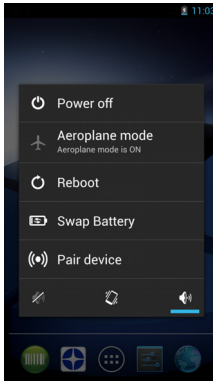

### Power Off

Touch **Power Off** to turn off the terminal. When you turn off the terminal, the session you are working on expires and it won't be possible to restore it.

### Airplane Mode

Touch **Airplane Mode** to toggle the mode **ON** or **OFF**.

### Reboot

Touch Reboot to perform a Soft Reset (see "[Soft Reset](#)" on page 33).

### Swap Battery

Swap Battery mode is a low power suspend mode that allows you to replace the battery pack without closing files and applications. It maintains the main memory contents and keeps applications running but does not allow you to operate any of the device's functions.

To switch to Swap Battery mode:

1. Tap **Swap Battery**.
2. Wait for the red Logo indicator to turn off.
3. Replace the battery (see '[Replace the Battery](#)' on page -16).
4. Press and release the power button to resume your session.

## Pair Device


**Scan2Pair** and **Tap2Deploy** allows to start a pairing session with a PC via DXU software.

DXU is the Datalogic system application for device configuration and firmware upgrade from a Windows PC. Refer to the DL-Axist User's Manual for further information.

### Scan2Pair

Starts a pairing with DXU by reading a barcode containing the configuration data of your PC.

Open DXU on your PC and touch **Scan2Deploy**:

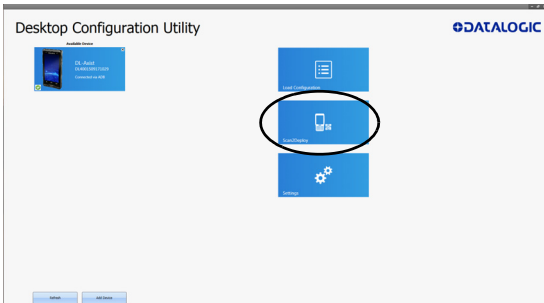

From the **Wi-Fi Configuration** window you can select the barcode type and set the Wi-Fi and pairing configuration data.

Touch **Print** to create the barcode; touch **Save** to save it on your hard disk:





## Tap2Deploy (NFC)


Starts a pairing with DXU by reading an NFC tag containing the configuration data of your PC.

The tag is automatically created by connecting the DL-Axist to your PC using the dock or the USB cable.



Alternatively, from DL-Axist's **Long Press Power Menu**, tap **Pair Device** > **Tap2Deploy** > **Pair with DXU** > **Create Pairing Tag**:

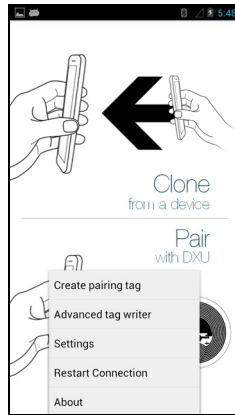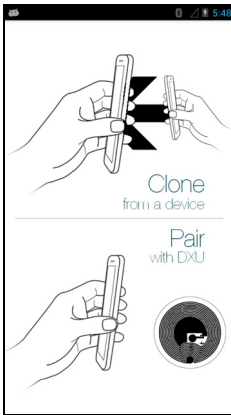

Tap **IP** to set the IP address and the port number:

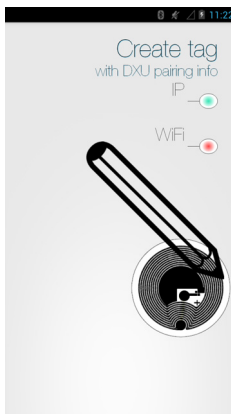


Tap **WiFi** to set the Wi-Fi info:

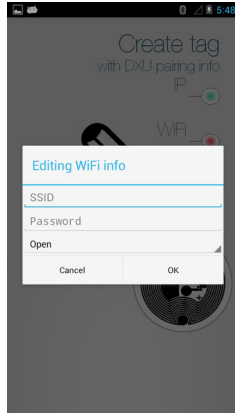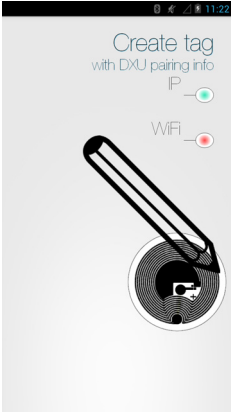

Refer to the DL-Axist User's Manual for further information on Tap2Deploy.

# Home Screen

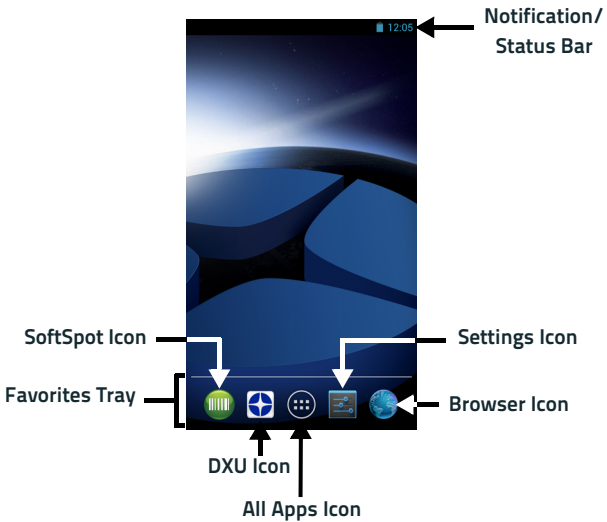

## Home Screen Items

<b>Notification/Status Bar</b>	Displays the time, status icons (right side), and notification icons (left side).
<b>Favorites Tray</b>	It is like a dock for your home screen. By default, it includes commonly used apps, but you can customize it.
<b>DXU Icon</b>	Launch the DXU Agent
<b>SoftSpot Icon</b>	Launch the SoftSpot application.
<b>All Apps Icon</b>	Opens the Apps window. Tap it to view the Apps and Widgets loaded on your device.
<b>Settings Icon</b>	Opens the Settings.
<b>Browser Icon</b>	Opens the Browser application.

## Customize the Home Screen

Application shortcuts placed on the Home screen allow quick and easy access to applications. Widgets are self-contained applications placed on the Home screen to access frequently used features.

The user can add application icons, shortcuts, widgets and other items to any part of the Home screen where there is free space.

### To add an application shortcut:

1. Tap the **All Apps** icon.
2. Tap and hold the app icon you want to add until the home screen appears.
3. Drag and drop the icon into position on the home screen panel or in an open spot in the Favorites tray.

### To add a widget:

1. Touch the **All Apps** icon.
2. Tap the **Widget** tab.
3. Tap and hold the item you want to add until the home screen appears.
4. Drag and drop the widget into position on the home screen panel.

### To create a folder:

Drag and drop an application icon on top of another icon.

Tap the folder.

Tap the title area and enter a folder name using the keyboard.

1. Tap anywhere on the home screen to close the folder. The folder name appears under the folder.

To delete items:


2. Tap and hold the shortcut, widget or folder until it floats on the screen.
3. Drag the item to "**X Remove**" at the top of the screen.



## Virtual Keyboard





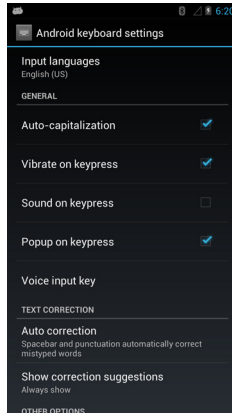







The virtual keyboard appears when you open an application or select a field that requires text or numerical input.













To configure the keyboard settings, tap **Settings > Language & input > Android keyboard**:



## Applications

The **All Apps** screen displays icons for all installed applications. The table below lists the default applications installed on the DL-Axist.

Icon	Description
	AnExplorer - Another Material File Manager you can use to easily find, browse, move, compress, and otherwise manage your apps.
	Browser - Use to access the Internet or intranet.
	Calculator - Provides the basic and scientific arithmetic functions.
	Calendar - Use to manage events and appointments.
	Camera - Take photos or record videos.
	Clock - Use to schedule alarms for appointments or as a wake-up.
	Downloads - Lists all downloads files.
	DXU Agent - Launch to start a pairing with DXU by reading a barcode containing the configuration data of your PC. Refer to the DL-Axist User's Manual for further information.
	Email - Use to send and receive email.
	Enterprise Agent- Enhances the lockdown functionalities of SureLock and SureFox to ensure advanced device security. Refer to the DL-Axist User's Manual for further information.
	Gallery - Use to view photos stored on the internal storage memory and on the microSD card.
	Movie Studio - Create movie videos.

Icon	Description
	Music - Play music stored on the internal storage memory and on the microSD card.
	People - Use to manage contact information.
	Phone - Use to make phone calls.
	Scan2Pair – Enables 2D imager data capture (see ‘Imager Data Capture’ on page -43).
	Scanner – Enables data capture (see ‘Data Capture’ on page -43).
	Search - Use the Google search engine to search the Internet and the DL-Axist.
	Settings - Use to configure the DL-Axist. Refer to the DL-Axist User’s Manual for further information.
	SoftSpot - A configurable application meant to provide easy access to frequently used functionalities. Refer to the DL-Axist User’s Manual for further information.
	Sound Recorder - Use to record audio.
	SureFox - Use to controls web access for the users. Refer to the DL-Axist User’s Manual for further information.
	SureLock - Use to secure and lock your device. Refer to the DL-Axist User’s Manual for further information.
	Tap2Deploy - Use to enable NFC pairing. Refer to the DL-Axist User’s Manual for further information.

# Resetting the Terminal


## Configuration Reset

Configuration reset sets the configuration of the device (all its settings) to a known status: the factory status or an enterprise-user-defined status.

### Factory Reset

Brings the device to the default configuration, clearing all the user-customized settings.

1. Tap **Settings > Backup&reset.**
2. Tap **Factory data reset**
3. Tap **Reset phone.**

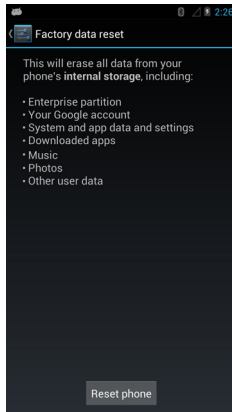


### Enterprise Reset

Enterprise Reset brings the device to an enterprise-user-defined configuration, clearing all data and settings except the ones persisted by the enterprise system applications in the /enterprise flash partition and in the /splash flash partition.

The Enterprise folder is a file system storage that is used for deployment and device-unique data. It is persistent and maintains data after an Enterprise reset. Applications and custom settings (i.e. custom boot animation and wallpaper) can persist data after an Enterprise Reset by saving data to the enterprise folder.

1. Tap **Settings > Backup&reset.**
2. Tap **Enterprise reset**

- Tap **Reset phone**.

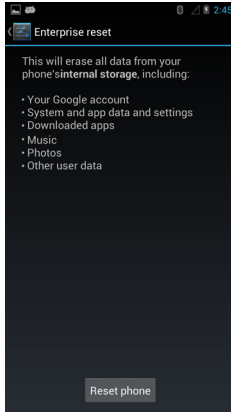

## Device Reset

Device reset restarts the device.

### Soft Reset

Restarts Android Operative System through an Android API function. It is generally used when some applications stop responding, or it is automatically issued by Android after a Configuration reset.

1. Press and hold the **Power** button.
2. Tap **Reboot**.
3. The device shuts down and then reboots.

### Hard Reset

Restarts the device resetting all the hardware components. This procedure guarantees the safe reboot of the device in any condition, without causing damage to the device and without data loss. It is generally used when the device stops responding or after a critical failure that compromises its usability.

Simultaneous press and hold the following buttons:

- **Power button**
- **Left trigger**
- **Search button**

## LED Indicators

The LEDs illuminate to indicate various functions or errors on the reader. The following tables list these indications. The good read LED indicator is programmable, and may or may not be turned on (refer to the DL-Axist User's Manual for more details).


LED	Status	Description
Charging LED	Red Constant	Light is solid red while charging.
	Green Costant	Light is solid green once the charging process has completed (full charge).
	Red Blink	Blinking red indicates a charge fault.
Good Read LED	Red	Light is red from the time the user presses the scan key until the barcode is decoded, until the scanner times out, or until the user releases the scan key.
	Green	Light changes to green when a good decode is completed.

# Connections

## USB Connection

### USB Direct Connection

You can use the supplied USB charge/communication cable to directly connect the DL-Axist to a host computer and transfer data through the USB interface.




Connection through the cable complies to USB 2.0 standard.

### USB Dock Connection

The single dock can be connected to the host computer by means of a standard micro USB cable.

Once the host computer has been turned on, insert the DL-Axist into the dock.

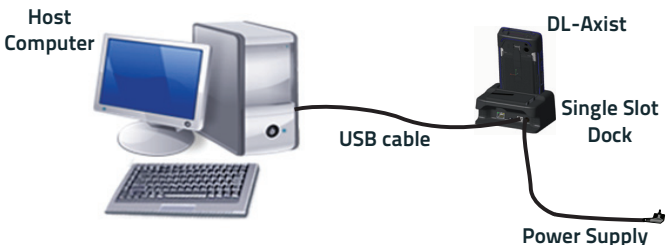



**NOTE**

Connection through the cable complies to USB 2.0 standard.



**NOTE**

The actual data transfer speed can be appreciably lower than the maximum theoretical speed.




## Ethernet Connection

Use the single dock to build a reading system for the collection, decoding and transmission of barcoded data.

### Ethernet Dock Connection



1. Connect the single dock to the power supply.
2. Use the slide switch on the dock to select the ethernet connection.
3. Plug a CAT-5 ethernet cable into the ethernet port on the back of the dock.
4. Plug the ethernet cable into the ethernet hub or a port on the host device.
5. Insert the DL-Axist into the dock.

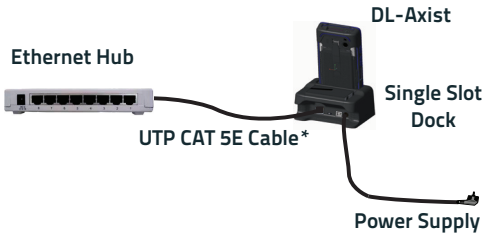

\* Recommended use

## WLAN Connection

The DL-Axist has a 802.11a/b/g/n WLAN (Wireless Local Area Network) radio and can communicate with other 802.11a/b/g/n, Wi-Fi compliant products including access points, workstations via PC card adapters and other wireless portable devices.

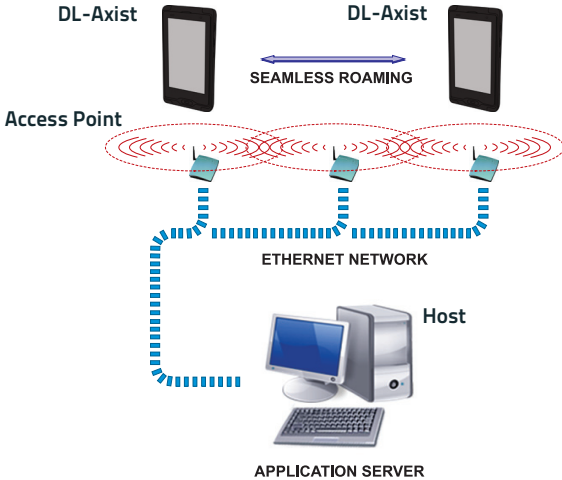

Area coverage and radio performance may vary, due to environmental conditions, access point types or interference caused by other devices (microwave ovens, radio transmitters, etc.).

## MIMO (Multiple-Input and Multiple-Output)

DL-Axist supports MIMO technology.

MIMO (multiple-input and multiple-output) is a method for multiplying the capacity of a radio link using multiple transmit and receive antennas to exploit multipath propagation. It is a practical technique for sending and receiving more than one data signal with the same radio channel simultaneously via multipath propagation.

MIMO has become an essential element of wireless communication standards including IEEE 802.11n (Wi-Fi), IEEE 802.11ac (Wi-Fi), HSPA+ (3G), WiMAX (4G), and Long Term Evolution (4G).



### NOTE

**MIMO technology is only available in Wi-Fi models.**



### NOTE

**Ensure your Wi-Fi infrastructure is compatible with MIMO technology to provide the best coverage and speed performance.**


## WWAN Connection

The DL-Axist enhances your connectivity solutions giving you an opening to an international wireless infrastructure that is the global standard. It is optimized for the following two-way communications:

- Voice: GSM voice data (dial-up)
- Data: Available speed depends on the wireless network carrier and their supported packet-data technology in addition to network conditions.

The DL-Axist supports the following bands:

- 2G bands: 850 / 900 / 1800 / 1900
- 3G bands: 2100 / 1900 / 850 / 900.

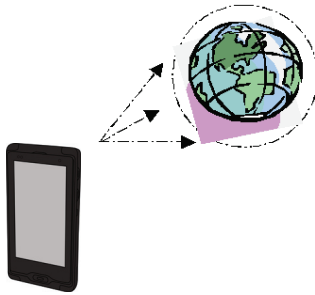

The signal strength of the connection is indicated by the number of bars that appear in the signal icon located in the Status bar at the top of the screen.



In order to use a WWAN Connection you have to install a SIM Card (see "Install the SIM Card" on page 19)



**You can use the WWAN radio for simultaneous voice and data communication on a UMTS (3G) network only. On a GSM network, if you want to communicate over the phone (voice), you cannot send data. If you want to send data, you cannot use the phone.**



**Area coverage and 3G performance may vary, due to environmental conditions, access point types or interference caused by other devices (microwave ovens, radio transmitters, etc.).**


## WPAN Connection

The DL-Axist can communicate with a Bluetooth® device, such as a printer, within a range of 10 m, using the on-board Bluetooth® module.




**NOTE**

In order to extend battery life, the Bluetooth® module is off by default. If you need to have Bluetooth® working, the module must be powered on (refer to the DL-Axist User's Manual for further details).



**NOTE**

Suspending the terminal powers off the Bluetooth® radio and drops the Bluetooth® connection. When the terminal resumes, it takes approximately 10 seconds for the Bluetooth® radio driver to re-initialize the radio.



**NOTE**

Area coverage and Bluetooth® radio performance may vary, due to environmental conditions or interference caused by other devices (microwave ovens, radio transmitters, etc.).

## Near Field Communication (NFC)

NFC technology allows short-range, wireless data transfer between the terminal and NFC tags or other NFC enabled devices placed in close proximity to the back of the terminal.

DL-Axist support the following modes of operation:

- NFC tag reader/writer mode: the terminal reads and/or writes digital information from or to an NFC tag.
- Peer-to-Peer (P2P) mode: the terminal uses Android Beam and/or Bluetooth@ technology to transfer screen content (e.g., a picture, web page url, or file) between NFC enabled devices.
- NFC card emulation mode - The terminal emulates an NFC card (smart card) that an external card reader can access.

### Read NFC Tags

1. Make sure NFC is enabled (refer to the DL-Axist User's Manual for further details).
2. Hold the NFC tag close to the back of the terminal.
3. When an NFC tag is recognized, the terminal emits a sound and the tag data displays on the terminal screen.

See also "Tap2Deploy (NFC)" on page 25.



**Suspend mode and the screen lock temporarily turns the NFC radio off.**



## Data Capture

The DL-Axist has an integrated imager that collects data by scanning barcodes.


Refer to the 'Scanner Settings' section of the DL-Axist User's Manual for instructions on configuring the scanner settings.

### Imager Data Capture

The imager uses digital camera technology to take a digital picture of a barcode, the image is stored in memory and software decoding algorithms are executed to extract the data from the image.

To scan a barcode symbol:

1. Point the scan window at the barcode.
2. Tap **Scan** on the screen or press one of the scan buttons on the DL-Axist. The imager projects a laser aiming pattern similar to those used on cameras. The aiming pattern is used to position the barcode or object within the field of view.

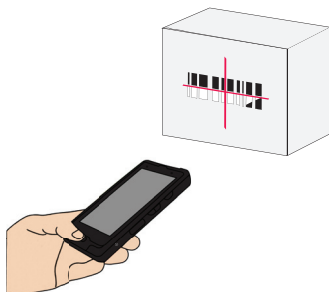

3. Center the symbol in any orientation within the aiming pattern. Ensure the entire symbol is within the rectangular area formed by the brackets in the aiming pattern, then either wait for the timeout or release the scan key to capture the image. A red beam illuminates the symbol, which is captured and decoded.

Linear Bar Code



2D Matrix Symbol



If the scan has been successful:

If the scan has been successful:

- If enabled, the good read LED glows steadily green for a configurable time.
- If enabled, the good read beep plays.
- The barcode type and content data display on the screen.

The field of view changes its size as you move the reader closer or farther away from the barcode. The aiming pattern is smaller when the imager is closer to the barcode and larger when it is farther from the barcode.

Scan symbols with smaller bars or elements (mil size) closer to the unit and those with larger bars or elements (mil size) farther from the unit. Hold the DL-Axist between two and nine inches (depending on symbol density) from the symbol, centering the aiming pattern cross hairs on the symbol.





## Reference Documentation

For further information regarding DL-Axist refer to the SDK Help online and to the DL-Axist User's Manual, downloadable from our website [www.datalogic.com](http://www.datalogic.com).

For information regarding safety and regulatory refer to the Regulatory and Safety Addendum and to the dedicated section of the DL-Axist User's Manual.

# NOTES



## Services and Support

Datalogic provides several services as well as technical support through its website. Please check our website at [www.datalogic.com](http://www.datalogic.com) under 'Support & Services', then 'Automatic Data Capture', and click on the links indicated for further information including:

- **Downloads**
  - **Manuals** for the latest versions of user manuals and product guides.
  - **Software & Utilities** for the latest firmware release for your product. You can also click on the following link for direct access to this section: [www.datalogic.com/products\\_updates](http://www.datalogic.com/products_updates).
- **Service Program** for warranty extensions and maintenance agreements.
- **Repair Centers** for a list of authorised repair centers.
- **Technical Support Automatic Data Capture** email form to contact our technical support.

## Warranty Terms and Conditions

The warranty period is 1 year for the device and 90 days for consumables (e.g. battery, power supply, cable etc.) from date of purchase at our company.

# NOTES



[www.datalogic.com](http://www.datalogic.com)

©2016 Datalogic ADC S.r.l. ■ All rights reserved.  
Datalogic and the Datalogic logo are registered  
trademarks of Datalogic S.p.A. in many countries,  
including the U.S.A. and the E.U.

**Datalogic ADC S.r.l.**

Via S. Vitalino, 13 | Lippo di Calderara di Reno  
40012 BO | Italy | Telephone: (+39) 051-3147011  
Fax: (+39) 051-3147205



822001860

(Rev A)

May 2016